
Assembly Instructions: 9808-OFM

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of

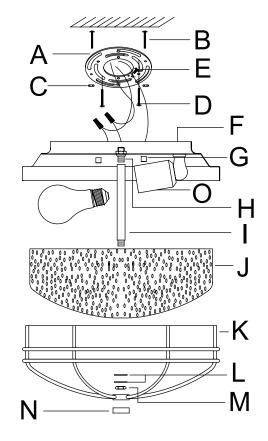

How to Identify the Fixture's Wires			1 2	House Wires
<u>Hot</u>	Neutral	Ground	- 1 E-	Hot
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread	Fixture Wires	Neutral
Black	White		Neutral — Grou	Ground
Black Inner Thread	White Inner Thread		Ground -	

PREPARING FOR INSTALLATION

Remove all of the contents from the carton. See the important notes above. Remove the old fixture from the ceiling, including the old mounting strap.

- 1. From the parts bag remove the mounting strap assembly. Mounting strap (A) contains threaded holes. Two sets of mounting screws (B) should be attached to mounting strap (A). You may need to tighten nuts (C) that hold these screws in place. If mounting screws (B) are not in place, hold the canopy up to the mounting strap and insert mounting screws (B) through the mounting strap into the exposed holes of the canopy until the screw threads protrude from the holes in the canopy. Remove the canopy and then secure mounting screws (B) in place on the mounting strap using hex nuts (C).
- 2. Secure mounting strap (A) to the junction box with mounting screws (D) and a screwdriver. Tighten the screws securely.
- 3. Pull house wires through the center of the mounting strap (A).

CONNECTING THE WIRES

4. Have an assistant support the weight of the fixture while completing the wiring. Cut away any excess wire leaving 8 to 10 inches of wire for installation. Attach the fixture's wires to the house wires which were pulled earlier from the junction box through the mounting strap (A). Connect black to black (transparent wire with black inner thread or smooth); white to white (transparent wire with white inner or ribbed); ground to ground (transparent wire with green inner thread, green, or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no house ground wire coming from the junction box, locate ground screw (E) on the mounting bracket/mounting strap and wrap the fixture's ground wire around the ground screw. Use a screwdriver to tighten the top of ground screw (E) onto the wires and into the mounting bracket/mounting strap. Tuck the wires into the junction box.

FINISHING THE INSTALLATION

- 5. Push the ceiling pan (F) up to the ceiling so that mounting screws (B) protrude through the holes in the ceiling pan (F).
- 6. Thread deco nuts (G) onto the exposed threads of mounting screws (B) to secure the ceiling pan in place.
- 7. Install light bulbs (not provided) into socket (O) in accordance with the fixture's specifications. Do not exceed the maximum wattage.
- 8. Thread the rod (I) onto the fixture nipple (H). Hold glass shade (J) up against the ceiling pan until rod (I) protrudes from the center hole in the glass shade. Next, secure washers (L) using nut (M) onto rod (I) in the order shown on the above diagram. This will hold the glass in place for the time being until the cage is secured.
- 9. Slide cage (K) over the glass shade until the rod (I) protrudes from the center hole in the cage (K). Secure the cage using finial (N).

Your installation is now complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.

